

Mounting instruction

pewag ladder chains without camlocks
pewag studded ladder chains without camlocks



Mounting instruction

1




Hang the chain into the tire thread by means of the enclosed mounting cable.


2



Drive forward one full turn of the wheel, check successful mounting of the chain and remove mounting cable.

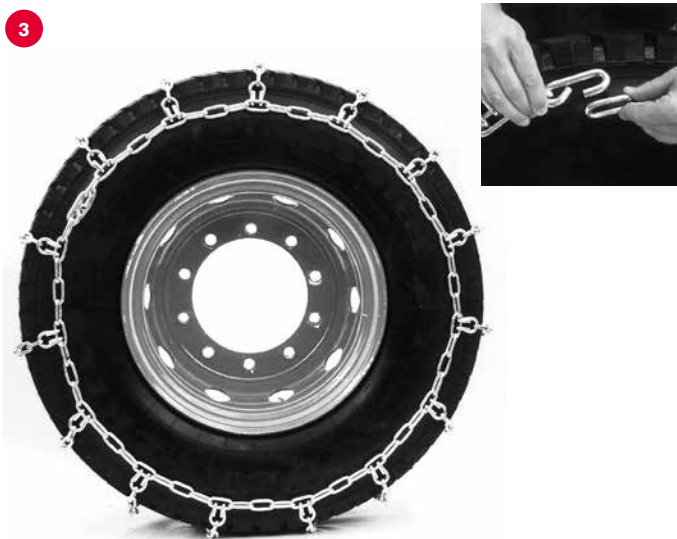

Close chain ends, beginning with the inside hook (see magnifier).

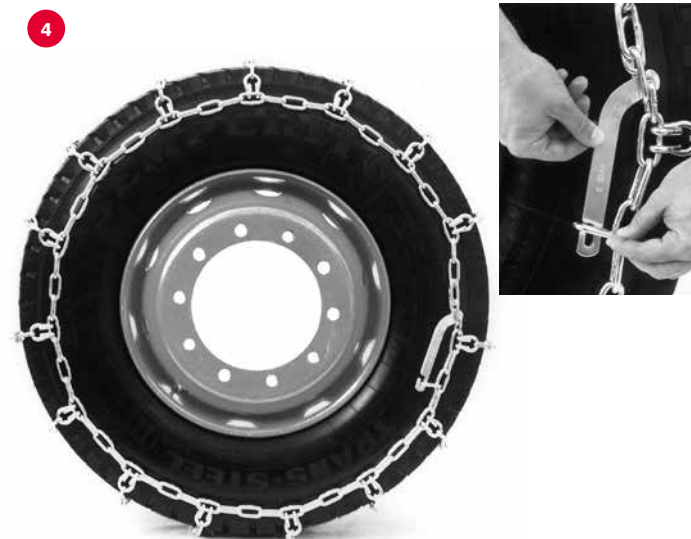

Then tighten the outside chain and close it by means of the tension lever.

Please read the vehicle manufacturer's manual and enclosed precaution instructions carefully.

pewag Schneeketten GmbH

A-9371 Brückl, Kettenwerk 1, Phone: +43 (0) 50 50 11-0, Fax: +43 (0) 50 50 11-100

schneeketten@pewag.com, www.pewag.com



9 400999 419160151
MA/00670

